

Pool Light Installation

Step 1

A temporary eyeball is fitted to the pool at the factory for shipping. Remove this eyeball (will be the lower eyeball in the pool) by turning the white locking nut on outside of pool in an anti clockwise direction.

The rubber gaskets are attached with silicone to the wall of the pool and will remain in place. The eyeball should slide out.




Pool Light Installation

Step 2

Remove the light from the box and unwind power cord

Pass the cord thru the hole from the inside of the pool. Avoid scraping cord on stainless

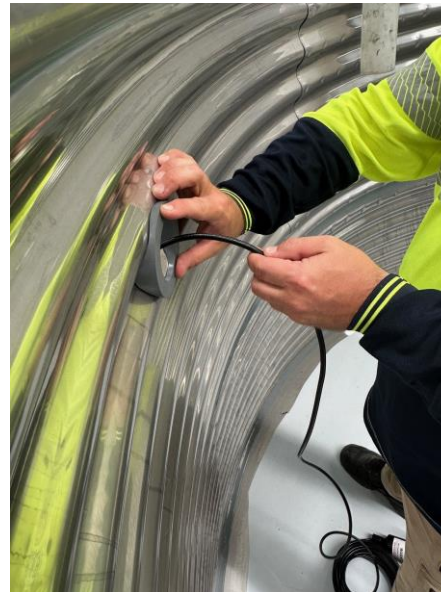

Pool Light Installation

Step 3

Slide the light into the hole.

Ensure the light is facing upwards. See top written on light.



Pool Light Installation

Step 4

Slide parts onto the cord from outside the pool in order shown. Hand tighten the outer lock nut. DO NOT use tools. Firm hand tight is sufficient.

Your light is now ready to be connected to the transformer supplied.

